

Ernesto Müller

Telas para peneiras e filtros em aço inoxidável e galvanizado.



Rua Pres. Roosevelt, 1352 São Leopoldo - RS



51 3592 1352



www.ernestomuller.com.br



@telasmuller




51 98408 1352

Galvanizadas			
Malha	Fio m/m	BWG	Abertura m/m
2	1,24	18	11,46
2 1/2	1,07	19	9,09
3	0,89	20	7,58
4	0,81	21	5,54
4 1/2	0,71	22	4,93
5	0,63	23	4,45
6	0,56	24	3,67
7	0,56	24	3,07
8	0,51	25	2,67
10	0,46	26	2,08
12	0,41	27	1,71
14	0,36	28	1,45
16	0,33	29	1,26
18	0,30	30	1,11
20	0,23	32	1,04
22	0,23	32	0,92
24	0,20	33	0,86
26	0,20	33	0,78
28	0,18	34	0,73
32	0,18	34	0,61
36	0,18	34	0,53
40	0,18	34	0,46
Linha Leve Galvanizadas			
Malha	Fio m/m	BWG	Abertura m/m
2 1/2	0,89	20	9,27
3	0,71	22	7,76
4	0,63	23	5,72
5	0,56	24	4,52
6	0,46	26	3,77
8	0,41	27	2,77
10	0,36	28	2,18
12	0,32	29	1,80
14	0,30	30	1,51
18	0,23	32	1,18

Como medir

Malha é o número de aberturas por polegada linear medida de centro a centro dos arames.

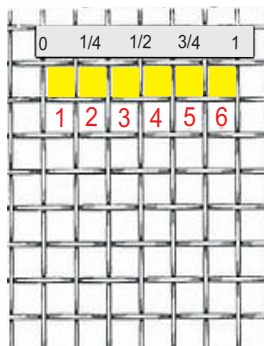

Exemplo de malha 6



1952 - 2017